

Figure 1

Cross Ventilation in a Building Using Open Windows and Transoms


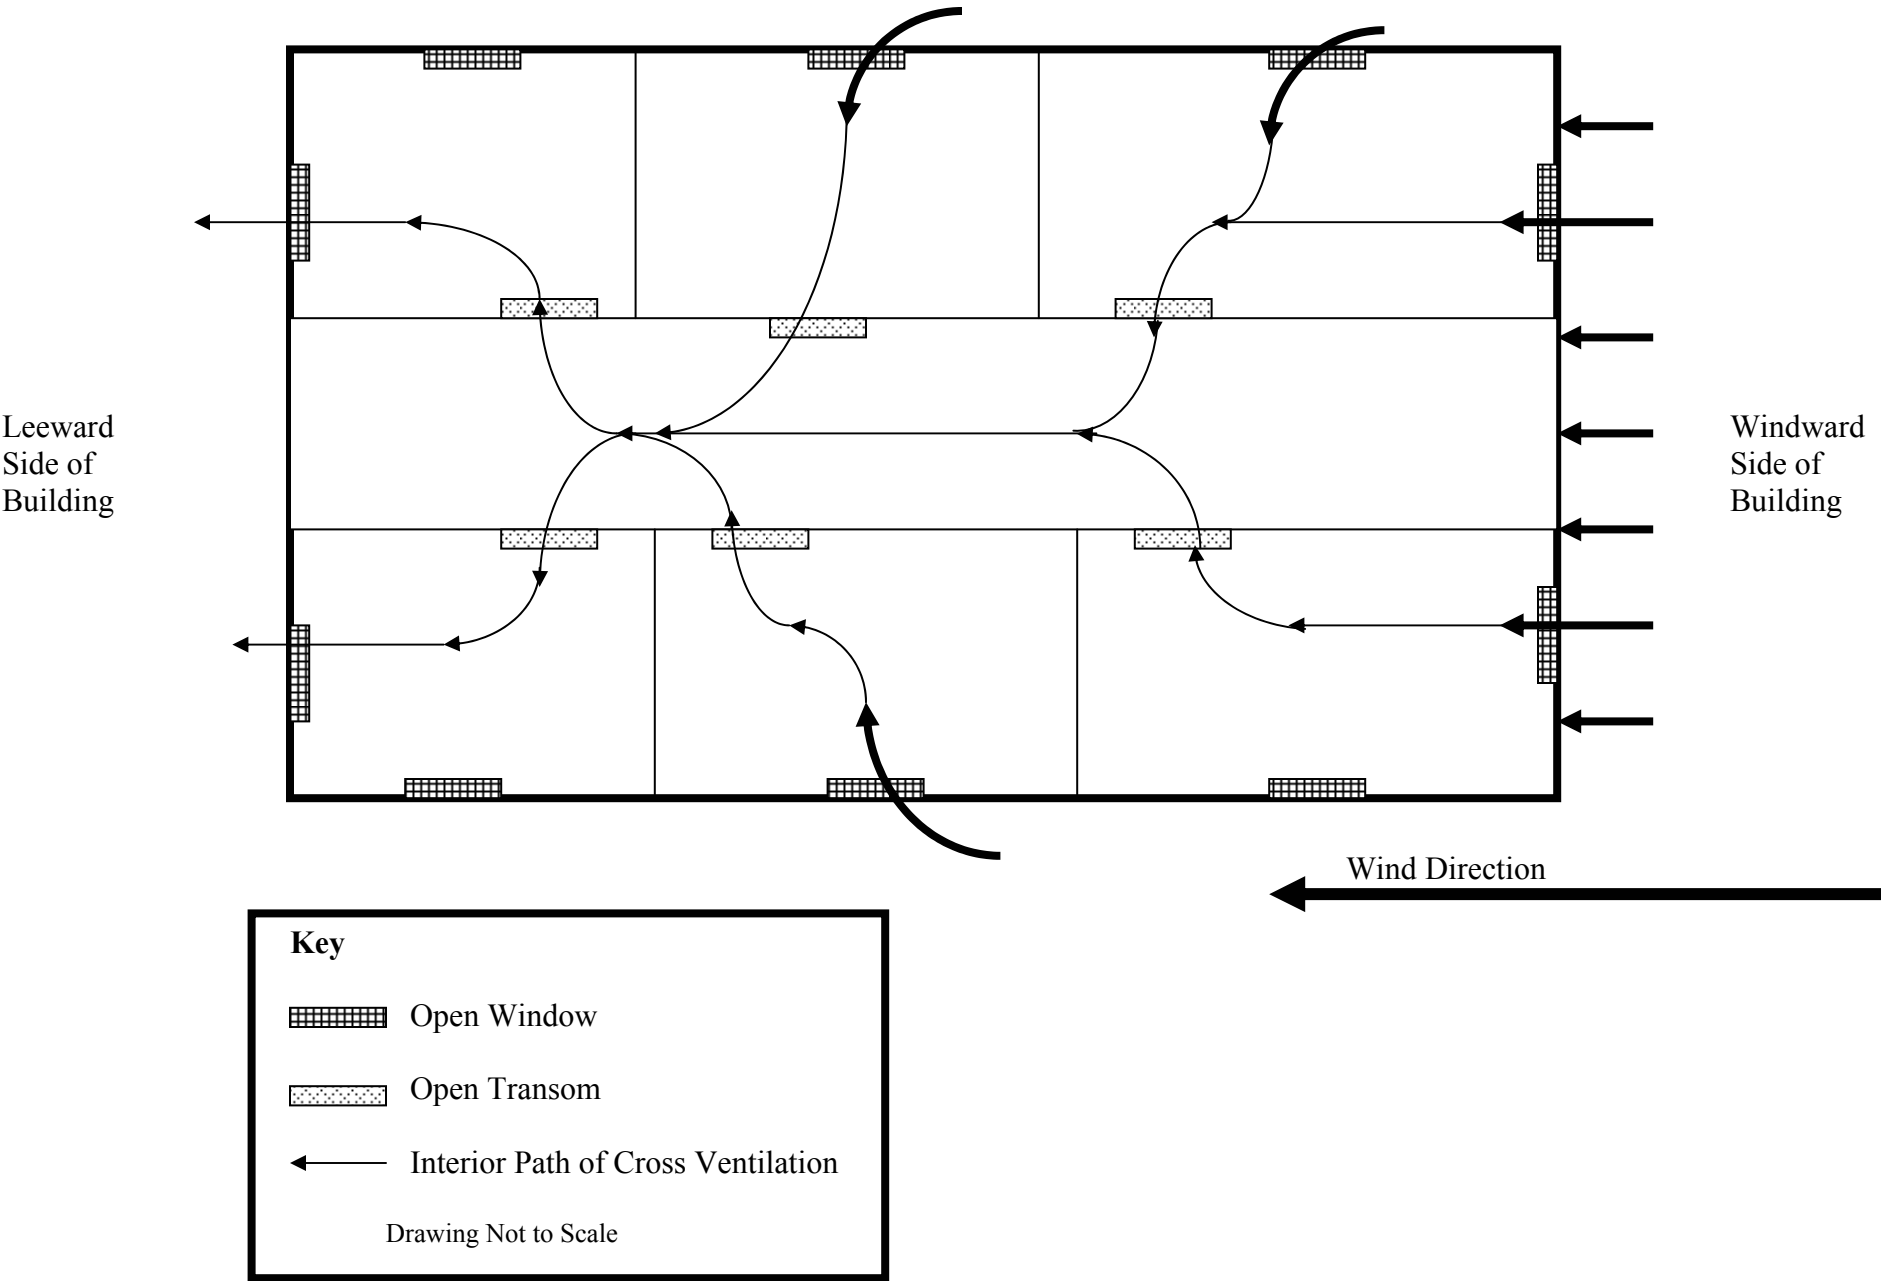







Figure 2

Inhibition of Cross Ventilation in a Building with Several Windows and Transoms Closed

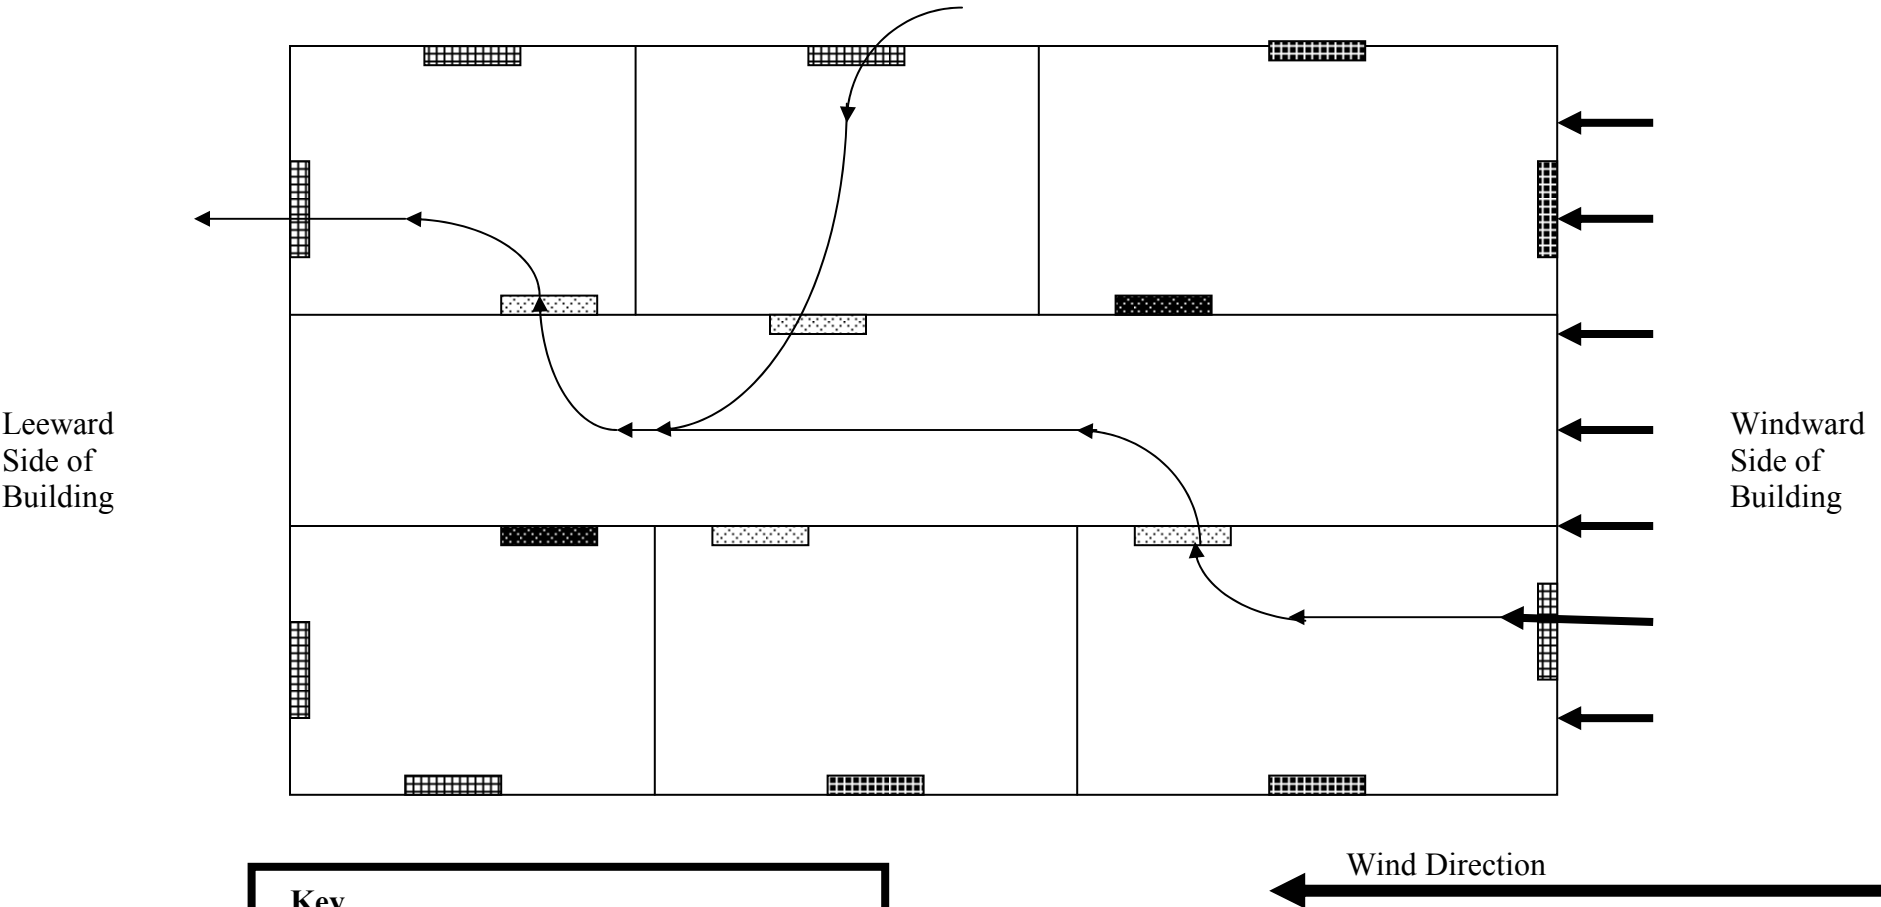

Key

-  Open Window
-  Open Transom
-  Closed Window
-  Closed Transom
-  Interior Path of Cross Ventilation

Drawing Not to Scale